



SEAL® 62 PRO D
LAMINATOR WITH
PRODUCTIVITY PACK



DUAL
HEATED ROLLERS

61 INCH
WIDE MOUNTING LAMINATOR

INDUSTRIAL
PERFORMANCE AT EXCEPTIONAL VALUE

SEAL® 62 PRO D LAMINATOR WITH PRODUCTIVITY PACK

The SEAL 62 Pro D is a 61" wide mounting laminator and encapsulator offering industrial performance at exceptional value. Productivity pack includes easy-in feed table and slitter to make laminating a snap while the fan banks cools the machine down when both rolls are heated. With fully adjustable dual temperature, speed and pressure settings, and designed on sturdy uni-frame construction, the 62 Pro D is ideal for the more experienced operator. Also includes comprehensive safety system with self checking eyes and emergency stops.

TUV SUD Certified in US/Canada



FEATURES:

Dual Heated Rollers

Dual heated rollers make most applications, including encapsulation, easy while exceptional roller technology delivers better processing of soft substrates.




Maximum Versatility

Laminates graphics up to 61" wide at speeds up to 20'/minute. 1 1/2" manual nip adjustment allows for precise operation and accommodates most substrates. The roll-to-roll operation (from bottom unwind) accommodates applications including vehicle wraps. Includes five un-wind/take up shafts and a film saving flip up pull roll system.



Easy to Use

Auto-grip upper take-up shaft for winding release liners, stay-put swing-up feed table keeps table up for easier media handling, flip up rollers for no hassle loading, foot switch and ergonomic touch pad control panel. Image guide ensures alignment and roll trough keeps rolled prints in place.

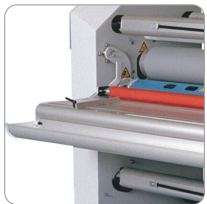

Laminator Type	Thermal & Pressure Sensitive
Maximum Substrate Length	61" (1549 mm)
Maximum Laminating Speed	20'/min. (6 m/min)
Foot Switch	Yes
Film Type	Thermal & Pressure Sensitive
Core Diameter	3" (76 mm)
Maximum Substrate Thickness (Nip)	1½" (38 mm)
Maximum Roller Temperature	284 °F (140 °C)
Roller Heating	Dual (Top/Bottom)
Temperature Control	Yes
Auto-Grip Shafts	5 (3 Combi/2 Fixed)
Maximum Roll Diameter	Unwind 12" (305 mm) Release liner upper wind up 6" (152.4 mm) Release liner lower wind up 8" (200 mm)
Maximum Roll Weight	132.2 lbs. (60 kg)
Electric Requirements	1N/PE 230VAC +/-10%, 50/60 Hz, 35A
Machine Dimensions	87.4"H x 56.3"W x 17.7"D (2220mm x 1430mm x 450mm)
Machine Weight	994 lbs. (450 kg)
Shipping Dimensions	90"W x 66"H x 38"D (2280mm x 1676mm x 965 mm)
Shipping Weight	1340 lbs. (608 kg)
Warranty	2 Year Limited. Extended warranty options available.

ITEM#	DESCRIPTION
Z64727	SEAL® 62 PRO D LAMINATOR WITH PRODUCTIVITY PACK

