



**SEAL® 62 PRO D**  
LAMINATOR WITH  
SLITTER ASSEMBLY



**DUAL**  
HEATED ROLLERS

**61 INCH**  
WIDE MOUNTING LAMINATOR

**INDUSTRIAL**  
PERFORMANCE AT EXCEPTIONAL VALUE




## SEAL® 62 PRO D LAMINATOR WITH SLITTER ASSEMBLY

The SEAL 62 Pro D is a 61" wide mounting laminator and encapsulator offering industrial performance at exceptional value. Comes installed with slitter assembly that includes 2 cutters/slitters. With fully adjustable dual temperature, sturdy uni-frame construction, speed and pressure settings, the 62 Pro D is ideal for the more experienced operator. Also includes comprehensive safety system with self checking eyes and emergency stops.

*TUV SUD Certified in US/Canada*

### FEATURES:

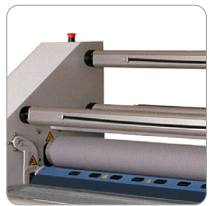

#### Dual Heated Rollers

Dual heated rollers make most applications, including encapsulation, easy while exceptional roller technology delivers better processing of soft substrates.



#### Maximum Versatility

Laminates graphics up to 61" wide at speeds up to 20'/minute. 1 1/2" manual nip adjustment allows for precise operation and accommodates most substrates. The roll-to-roll operation (from bottom unwind) accommodates applications including vehicle wraps. Includes five un-wind/take up shafts and a film saving flip up pull roll system.



#### Easy to Use

Auto-grip upper take-up shaft for winding release liners, stay-put swing-up feed table keeps table up for easier media handling, flip up rollers for no hassle loading, foot switch and ergonomic touch pad control panel. Image guide ensures alignment and roll trough keeps rolled prints in place.

Laminator Type	Thermal & Pressure Sensitive
Maximum Substrate Width	61" (1549 mm)
Maximum Laminating Speed	20'/min. (6 m/min.)
Foot Switch	Yes
Film Type	Thermal & Pressure Sensitive
Core Diameter	3" (76 mm)
Maximum Substrate Thickness (Nip)	1 1/2" (38 mm)
Maximum Roller Temperature	284F/140C
Roller Heating	Dual (Top/Bottom)
Temperature Control	Yes
Auto-Grip Shafts	5 (3 Combi/2 Fixed)
Maximum Roll Diameter	Unwind 12" (305 mm) Release liner upper wind up 6" (152.4 mm) Release liner lower wind up 8" (200 mm)
Maximum Roll Weight	132.2 lbs. (60 kg)
Electric Requirements	1N/PE 230VAC +/-10%, 50/60 Hz, 35A
Machine Dimensions	87.4"H x 56.3"W x 17.7"D (2220 mm x 1430 mm x 450 mm)
Machine Weight	994 lbs. (450 kg)
Shipping Dimensions	90"W x 66"H x 38"D (2280 mm x 1676 mm x 965 mm)
Shipping Weight	1340 lbs. (608 kg)
Warranty	2 Year Limited. Extended warranty options available

©2024 ACCO Brands. All rights reserved. All other trademarks are the property of their respective owners.



ITEM#	DESCRIPTION
64729	SEAL® 62 PRO D LAMINATOR WITH SLITTER ASSEMBLY