



SEAL® 62 PRO S LAMINATOR



HEAT
ASSISTED TOP ROLLER

61 INCH
WIDE MOUNTING LAMINATOR

INDUSTRIAL
PERFORMANCE AT EXCEPTIONAL VALUE



SEAL® 62 PRO S LAMINATOR

The SEAL 62 Pro S is a 61" wide mounting laminator and encapsulator offering industrial performance at exceptional value. With fully adjustable top roller temperature, speed, pressure settings and a sturdy uni-frame construction, the 62 Pro S is ideal for the more experienced operator. Also includes comprehensive safety system with self checking eyes and emergency stops.


TUV SUD Certified in US/Canada

FEATURES:



Heat Assist

Heat assisted top roller for superb lamination performance. Ideal for single side heat applications as well as cold.

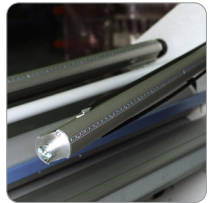

Maximum Versatility

Laminates graphics up to 61" at speeds up to 20'/minute. Equipped with adjustable pressure and speed settings and a 1-1/2" nip opening to cover a wide range of substrates. Offers 4 unwind/take up shafts, swing out supply shafts and shorter cabinet design. Roll to roll operation to accommodate applications including vehicle wrap.



Easy to Use

Auto-grip shafts for user friendly webbing, swing-up feed table facilitates easy set up and the foot switch provides hands free operation. Comes standard with a print roll trough, additional bracket to hold a spare auto-grip shaft, a rear nip adjustment handle and ergonomic touch pad control.

Laminator Type	Thermal/Cold
Maximum Substrate Length	61" (1549 mm)
Maximum Laminating Speed	20'/min. (6 m/min.)
Foot Switch	Yes
Film Type	Thermal & Pressure Sensitive
Core Diameter	3" (76 mm)
Maximum Substrate Thickness (Nip)	1½" (38 mm)
Maximum Roller Temperature	284 °F (140 °C)
Roller Heating	Single Top
Temperature Control	Yes
Auto-Grip Shafts	4 (2 Combi/2 Fixed)
Maximum Roll Diameter	Unwind 12" (305 mm) Release liner upper wind up 6" (152.4 mm) Release liner lower wind up 8" (200 mm)
Maximum Roll Weight	132.2 lbs (60 kg)
Electric Requirements	1N/PE 230VAC +/-10%, 50/60 Hz, 16A
Machine Dimensions	56.3"H x 87"W x 18"D (1430 mm x 2210 mm x 457 mm)
Machine Weight	850 lbs. (386 kg)
Shipping Dimensions	66"H x 90"W x 38"D (1676 mm x 2286mm x 965 mm)
Shipping Weight	1260 lbs. (571 kg)
Warranty	2 Year Limited. Extended warranty options available.

ITEM#	DESCRIPTION
Z64296	SEAL® 62 PRO S LAMINATOR

