



SEAL® 65 PRO MD

LAMINATOR WITH
SLITTER ASSEMBLY



DUAL
IR QUARTZ HEATED ROLLERS

65 INCH
WIDE MOUNTING LAMINATOR

EASY
OPERATOR INTERFACE


SEAL® 65 PRO MD LAMINATOR WITH SLITTER ASSEMBLY



The SEAL® 65 Pro MD with slit assembly is a high production, versatile laminator that can run both hot and cold applications. Its unmatched capability of running at speeds more than 15 feet per minute provide efficiency without sacrificing quality. Additionally, this laminator is designed with a sturdy uni-frame construction and features fully adjustable temperature, speed and pressure settings. Includes comprehensive safety system with self checking eyes and emergency stops.


TUV SUD Certified in US/Canada

FEATURES:

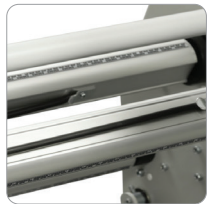

Hot and Cold Lamination

Dual IR Quartz heated rollers capable of running both hot and cold films. The rollers heat quickly to reduce set-up time and increase the thermal conductivity to maintain a more consistent, uniform temperature across the entire roll surface.

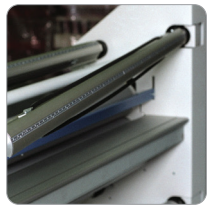

Maximum Versatility

65" working width to handle a wide range of media at a maximum operating speed of 15'/minute. 2" nip with precision pneumatic rollers for even speed and pressure to ensure smooth, wrinkle-free graphics. Easy handling with 4-auto-grip swing out supply shafts and bi-directional operation allows for efficient operating.



Easy to Use

Easy Operator Interface (EOI) with a touch screen, flip up in feed table for easy webbing, foot switch for hands free operation and self checking safety eyes for increased operator safety. Includes slit assembly including 2 cutters and slitters factory installed.

| | |
|-----------------------------------|--|
| Laminator Type | Thermal/Cold |
| Maximum Substrate Width | 65" (1651 mm) |
| Maximum Laminating Speed | 15'/min. (4.25 mm/min) |
| Foot Switch | Yes |
| Film Type | Thermal & Pressure Sensitive |
| Core Diameter | 3" (76 mm) |
| Maximum Substrate Thickness (Nip) | 2" (50 mm) |
| Maximum Roller Temperature | 275 °F (135 °C) |
| Roller Heating | Dual (Top/Bottom) |
| Temperature Control | Top/Bottom |
| Auto-Grip Shafts | 4 Supply/3 Drop In |
| Maximum Roll Diameter | Supply (4 positions) 12" (305 mm) / Take-Up (2 positions) 8" (200 mm) / Combi (2 positions) 10" (254 mm) |
| Maximum Roll Weight | 120 lbs. (54 kg) |
| Electric Requirements | US/Canada 208-230V, 50/60Hz, single phase, 50 amp - NEMA 6-50 Plug |
| Machine Dimensions | 62"H x 91"W x 51"D (1575 mm x 2311 mm x 1397 mm) |
| Machine Weight | 1850 lbs. |
| Shipping Dimensions | 69"H x 99"W x 43"D (1613 mm x 2515 mm x 1083 mm) |
| Shipping Weight | 2100 lbs. (953 kg) |
| Warranty | 2 Year Limited. Extended warranty options available |

©2024 ACCO Brands. All rights reserved. All other trademarks are the property of their respective owners.



| ITEM# | DESCRIPTION |
|-------|---|
| 64726 | SEAL® 65 PRO MD LAMINATOR WITH SLITTER ASSEMBLY <i>Mechanical Requirement Sold Separately: 2 cfm compresses air @ 100psi</i> |